 


SPEAKERS CONNECTIVITY DIAGRAM:

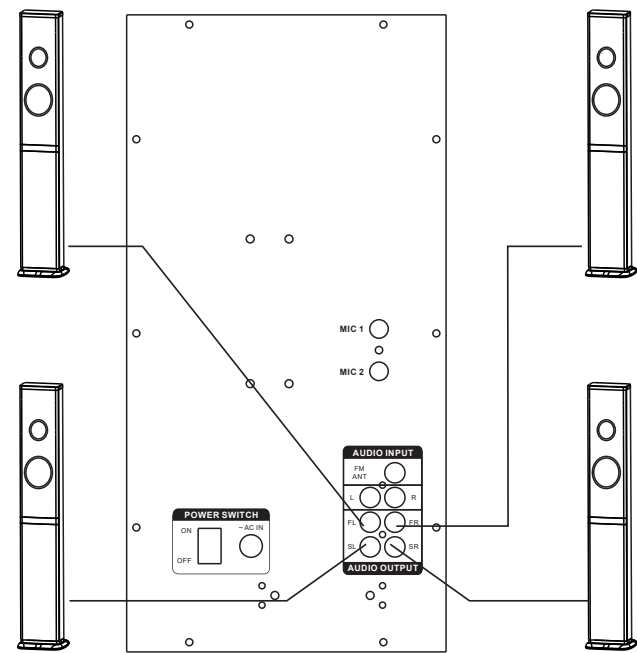


**SPEAKER TERMINALS**  
Connect front speakers, a center speaker, surround speakers to 4.1 speaker output terminals.

**NOTE:**  
\* Do not leave objects generating magnetism near the speakers.

NO. 5

SPEAKERS CONNECTIVITY DIAGRAM:

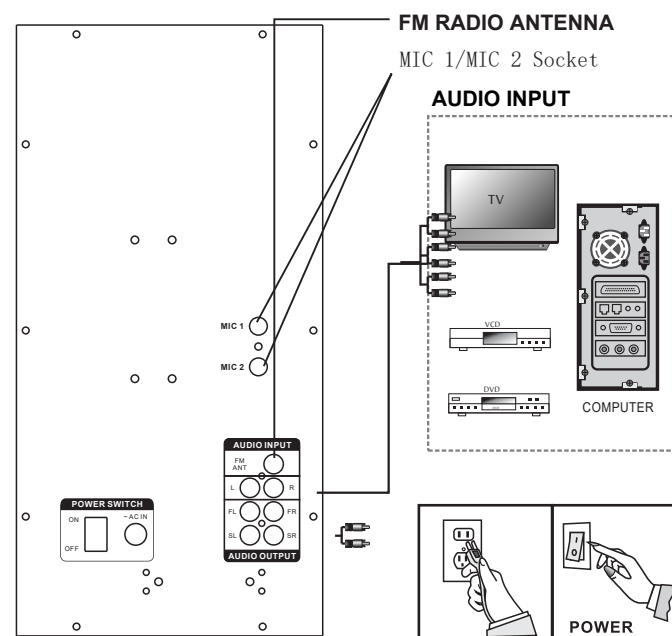

**Connecting equipment**  
Jacks and plugs of the connecting cord are color coded as follows:  
Red jacks and plugs: For the right channel of audio signals

**NOTE:**  
Insert the plugs fully into the jacks. Loose connections may produce a humming sound or other noise interference.

**Important:**  
Connect the speakers and all other external equipment, and finally connect the AC power cord.

NO. 6

# KB ELEMENTS

## Multimedia Speaker

4.1 Multimedia Speaker

Model: ES411

USER MANUAL



Please read the user manual carefully before using this product

www.elements-de.com

PACKAGE CONTENT:

- |                      |         |
|----------------------|---------|
| 1. Subwoofer Speaker | 1 Unit  |
| 2. Satellite Speaker | 4 Units |
| 2. Remote Control    | 1 Unit  |
| 3. Audio Cable       | 2 Units |
| 4. FM ANT            | 1 Unit  |
| 5. User Manual       | 1 Unit  |


SPECIFICATION:

Output power	:80W + 15W x 4
Speaker size	:3" x 4
Subwoofer	:8"
Satellite speaker	:3" x 4
Frequency response	:40Hz 20Hz
S / N Ratio	:≥ 75dB
Seperation	:≥ 50dB

**Note:**  
1. Don't put the speakers in high temperature or humid environment.  
2. Don't open the speakers to avoid electric shock or other accidents.  
3. In case of any object fallen into the speakers, cut off the power immediately and contact the nearby authorised service center.  
4. When receiving hight output signal from any audio sources (SD, USB, AUX, FM )don't turn the volume to maximum to avoid sound distortion.

NO. 1

FRONT PANEL:

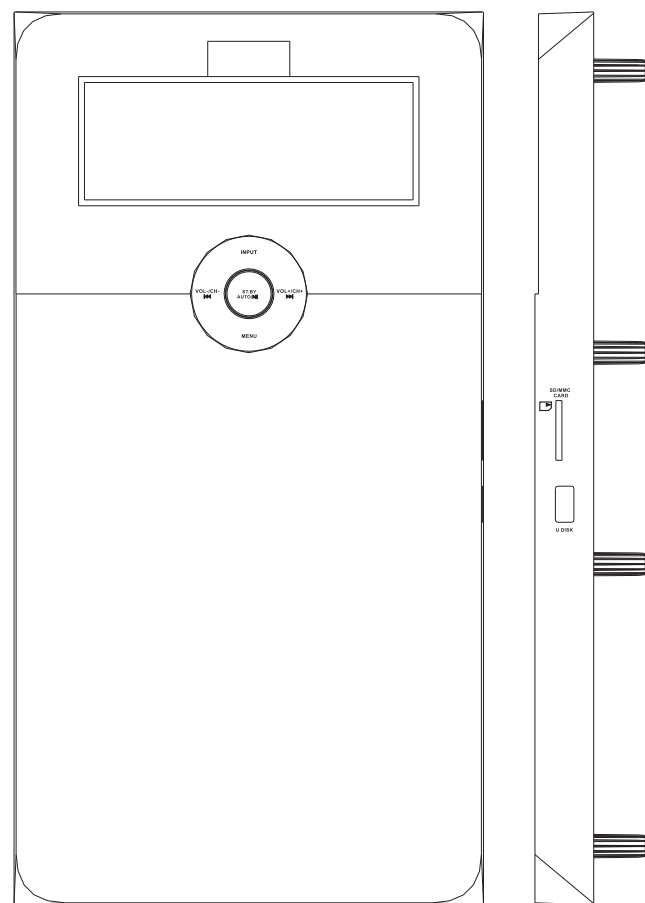


NO. 2

FRONT PANEL DESCRIPTION:

- ST BY .....ST. BY function key.
- AUTO / ►.....Automatic FM radio search in FM mode by pressing 3 secs  
Play/Pause in USB/SD mode
- INPUT ..... Input function key, switch among AUX/USB/SD/FM mode;  
Stand by function by pressing it 3 secs in AUX/USB/SD/FM mode.
- MENU .....Menu function key.
- VOL- ◀..... "Previous" will be "volume -" function if you keep pressing it more than 3 seconds.previous song when USB/SD input;  
Previous channel wen FM input.
- VOL+ ▶..... "Nxt" will be "volume+" function if you keep pressing it more than 3 seconds.Next song when USB/SD input;  
Next channel wen FM input.
- U DISK .....USB disk slot
- SD/MMC CARD .SD/ MMC card slot

NO. 3

REMOTE CONTROL DESCRIPTION:

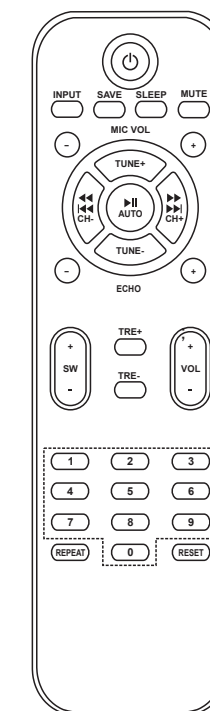

- ⏻ ....Power switch button, switch on or off for standby
- INPUT ....Function choices
- SAVE ....Save FM Channel
- SLEEP ....Set up the sleep time.
- MUTE .... Mute
- MIC +/- ....MIC volume to increase / decrease
- TUNE +/-.....Previous / Next channel keep pressing to search
- ▶▶ ....Play and Pause
- AUTO .... Keep Pressing for FM Channel auto scan
- ◀◀ ....Previous track when USB/SD Input
- ◀ ....Rewind
- CH - .....Previous saved channel in FM mode
- ▶▶ ....Next track when USB/SD Input
- ▶▶ ....Fast forward
- CH + .....Next saved channel in FM mode
- ECHO-/+ .....ECHO Control
- SW +/- .....Turn up or turn down the bass volume
- TRE-/+ .....Turn up or turn down the treble volume
- VOL +/- .....Turn up or turn down the master volume
- REPEAT .....It will repeat playing selected track if pressing once.  
It will repeat playing all the tracks if pressing twice.
- RESET .....Reset to the default setting

\*If the Remote Control cannot function,it is because the battery of remote control has been used up.Thank you.

NO. 4