 
 


Back panel connection diagram



www.elements-de.com

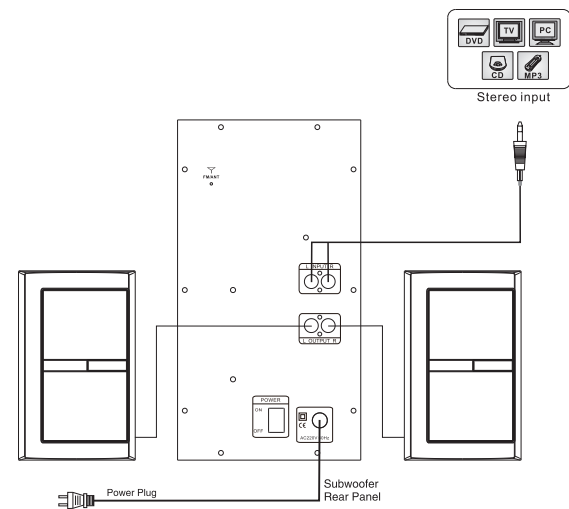

# KB ELEMENTS

## Multimedia Speaker

2.1 Multimedia Speaker

Model: ES24

 
USER MANUAL



Please read the user manual carefully before using this product

www.elements-de.com


Remote control Description

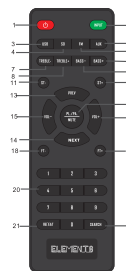

### Remote control Description

- 1.STANDBY : Press this Button to Turn On / Turn Off the Set.
- 2.INPUT: Press this Button to select Input (AUX / F.M. / BT/USB /SD ).
- 3.USB : USB Audio Play.
- 4.SD : SD Audio Play.
- 5.FM : Play FM Station.
- 6.AUX IN : AUX Audio input.
- 7.TREBLE (-) : To Reduce Treble of the Sound.
- 8.TREBLE(+ ) : To Increase Treble of the Sound.
- 9.BASS (-) : To Decrease the Bass in the Sound
- 10.BASS (+) : To Increase the Bass in the Sound
- 11.ST (-) :To go to Previous FM Station.
- 12.ST (+) :To go to Next FM Station.
- 13.PREV : In USB / SD Mode - To play Previous Song.  
In FM Mode - To Go to Previous Radio Station.
- 14.NEXT : In USB / SD Mode - To play Next Song.  
In FM Mode - To Go to Next Radio Station.
- 15.VOL (-) To Decrease the Master Volume.
- 16.VOL (+)To Increase the Master Volume.
- 17.PL /PA/ MUTE : To operate function of Play / Pause or to Mute the Sound.
- 18.FT (-) : FM Tunning Decreases by 0.1 MHZ by each Press.
- 19.FT (+) :FM Tunning Increases by 0.1 MHZ by each Press.
- 20.0 - 9 :To choose the song Number in USB / SD Mode.
- 21.REPEAT FUNCTION  
ONE:Repeat current song.  
ALL:Repeat all songs.  
SHUF:Shuffle the songs and play again and again.  
OFF:Play every song once,use their order.
- 22.SEARCH :FM Station Auto Scan only.

 Utility Description

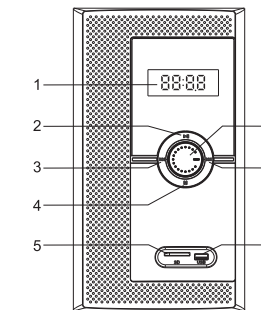

### Utility Description

- (1) LED display
- (2) Play/Pause
- (3) Last Music/FM scan
- (4) MODE
- (5) SD Card Slot
- (6) Volume/Mode adjustment
- (7) Next Music/FM scan
- (8) USB input