KB ELEMENTS

ChopChop

ELECTRIC CHOPPER

ELK306FC

USER MANUAL

Please read this manual carefully and retain for future references.

IMPORTANT SAFETY INSTRUCTIONS

Read all instructions carefully before use
1. Make sure that your outlet voltage is correspondent to the electric chopper "220-240V"
2. Place the electric chopper on a flat surface or on a table.
3. NEVER put appliance and cable in water or any other liquid to avoid electric shock.
4. DO NOT USE the electric chopper if the cord or any other part is damaged in order to reduce the risk of electric shock. If you encounter any faults, please contact nearest KB ELEMENTS point of sales.
5. Do not put weights on the cord, and keep it away from hanging over edges or touching hot surfaces to avoid damage.
6. Do not place the electric chopper on or near objects that produce high temperatures such as ovens, heaters, refrigerators, or stovetops.
7. Do not use attachments not recommended by KB ELEMENTS.
8. Always unplug the electric chopper when not in use or before cleaning, and always store it in a dry place.
9. Keep hands and utensils away from blades during operation.
10. Ensure the lid is properly locked before starting.
11. This appliance is intended for household use only. Commercial use is not permitted And it is NOT intended for outdoor use.
12. Keep the appliance out of reach of children.
13. Do not operate the appliance continuously for more than 1 minute. Allow it to cool between uses.
14. Always clean the appliance immediately after use to prevent food residue from hardening and to reduce the risk of bacterial growth.

TECHNICAL SPECIFICATIONS

Power Supply: AC 220-240V ~ 50/60Hz
Power: 300W full copper motor
Glass Bowl Capacity: 2 liters
Safety System: Interlock Protection

PRODUCT OVERVIEW

1. Power button
(| = Low speed ; || = High speed)
2. Motor unit
3. Chopper cover
4. Upper blade
5. Lower blade
6. Chopper bowl
7. Non-slip mat

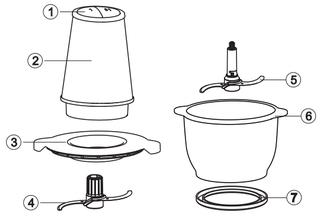

HOW TO ASSEMBLE AND USE THE CHOPPER

Place the chopper bowl securely on the non-slip mat.
Fit the blade assembly onto the center shaft inside the chopper bowl.
Place food into the bowl, making sure not to exceed the maximum fill line.
Secure the chopper cover firmly before proceeding.
Align the motor unit's base joint with the blade shaft, and mount it onto the chopper cover securely.
Plug in the appliance.
Press the power button and select your desired speed (Low or High) to begin chopping.

Usage Tips

Before First Use: Wash all detachable parts (excluding the motor base) thoroughly to remove any dust or manufacturing residue.
After Use: Unplug the appliance.
Wait until the blades come to a complete stop.
Remove the cover, then carefully remove the blade assembly by pressing and holding the center button while lifting straight upward.
Hold the motor unit steady with one hand while lifting the chopper bowl to prevent spills.

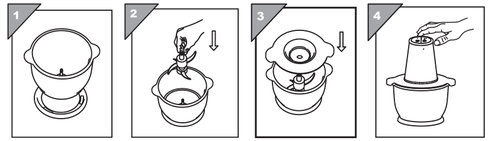

CLEANING AND MAINTENANCE

Use a soft, dry cloth to clean the motor housing.
Do not immerse it in water or rinse under running water.
Always unplug the appliance before cleaning.
Wipe the motor base with a damp cloth. Do not immerse in water.
Blades are sharp; handle with care during cleaning.
All detachable parts are hand-washable. Do not use abrasive cleaners.

Always store the cleaned appliance in a dry and flat place.

To know more about this product, please visit our youtube channel

www.kbelements.de